Melt Pressure Transmitter

Model: PT124G-122 (oil filled)

ZHYQ

Description

PT124G-122 Series Melt Pressure Transducer (Steel stem & Sanitary), filled with environmental, avirulent medium silicon oil. If the melt pressure sensor diaphragm damaged during process, the leaking medium is no harm to the human body or ambient. it has the wide application in Medicine & Food process equipment, drinking water environmental monitoring. with the advantage of precision and reliable pressure measuring and high-standard quality.

Application


- Chemical fiber Equipment
- Plastic and Rubber manufacturing equipment
- Medicine & Food process equipment ,
- Drinking water environmental monitoring occasion
- Other pressure measurement and Control

Feature

- Stainless steel welding
- Easy to install
- Zero and span adjustable
- Various amplified signals optional
- Internal 80% shunt calibration
- Good stability and anti-jamming capability
- Excellent stability and repetition

Dimension



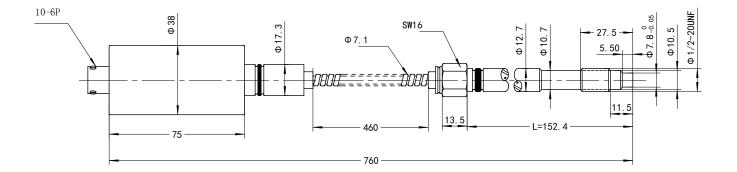

Melt Pressure Transmitter



Specification	
Range:	010MPa to 0150MPa
Output:	2mV/V ; 3.33mV/V
Accuracy:	±0.5%FS; ±1%FS
Excitation:	10 VDC
Repeatability:	±0.2% FSO
Construction:	Wheatstone bridge
Bridge resistance:	Input: 345 Ohms Minimum; Output: 350 Ohms±10%
Overload pressure:	1.5×FSO
Internal shunt calibration:	80%±1%
Insulation Resistance:	200Megohms @100Vdc
Standard wetted Parts	Diaphragm coated 15-5PH SST
Mounting Torque	500inch/lbs , maximum
Max. operating Temp:	0~250 ℃
Electronic operating temperature:	-25℃ -85℃
Electric connector:	5PIN;6PIN
Rigid Length:	6",9" (Customer design)
Flexible Length:	18", 30" (Customer design)
Process connection:	1/2"-20UNF, M14×1.5, M18×1.5 (Customer design)

Mounting Hole

	D1	M22×1.5	M28×1.5	G3/4″	PT3/8″
	D2	Ф16.1	Ф18.3	Ф18.3	Ф10.3
	D3	Ф20.1	Ф26.1	Ф24.2	Ф14.9
	М	Ф23	Ф30	Φ21	Φ11
	А	11	12	12	14
C B	В	12	15	15	19
Planar Sealed	С	40	35	35	40
	D1	M12×1.5	M14×1.5	1/2-20UNF	M18×1.5
S S S S S S S S S S S S S S S S S S S	D2	Ф8	Ф8	Ф8	Φ10.1
	D3	Ф10.8	Ф12.5	Φ11.5	Ф16.1
	D4	Φ12.5	Ф14.5	Ф13.1	Ф20
<u>A</u>	А	6	6	6	6.5
45° Slope Sealed	В	9	9.5	9.5	10

Ordering Guid	e						
Model	Range (bar)	Output	Rigid & flexible length (inch)	Screw Thread	Electric connection	Accuracy	Other requirement
PT124G-122							
Example: PT1	24G-122-50	0Bar-3.3	3mV/V -6/18"-1/2-	20UNF-6P	IN-1.0%FS		

ZHYQ sensor & control



Attention for installation

1, Installation

Do not remove protective cap until ready to install. Prior to initial installation, verify correct machining of mounting hole. Install with aluminum gasket. The electronics housing should be secured, with the enclosed mounting bracket.

2, Remove

Make sure that there is no remained metal or plastic; remove all of the transducers from the equipment before you clean the extruder. You can remove the transducer only when the polymer is molten. And clean the diaphragm of the transducer with soft cloth as soon as you remove it. At the same time, you can use ZHYQ's cleaning tool kit to clean the remained material in the mounting hole in order to install easily next time.

3, Start-up

Bring system to operating temperature, and with no pressure, follow recommended procedures with instrumentation for zero and span adjustment. Make sure that there is sufficient "soak time" to assure that any material at the tip of the transducer is molten before process is started.

4, Electrical house

The tip of the transducer can endure high temperature, but the shell (electrical house) only endure temperature lower than 80° C, so it should place in the room temperature. It can benefit for the accuracy and natural life of the transducer if you keep the shell from the high temperature.


5, Overload effect

During the course of pressure measuring and controlling, it is better to make sure the transducer within the rated pressure, too long time overload the pressure will affect the accuracy and natural life of transducer, although the transducer own determinate overload ability.

6, Wiring

Use shielded cable, attach cable shield to ground at one end only. In order to prevent the jamming.

Select correct installation

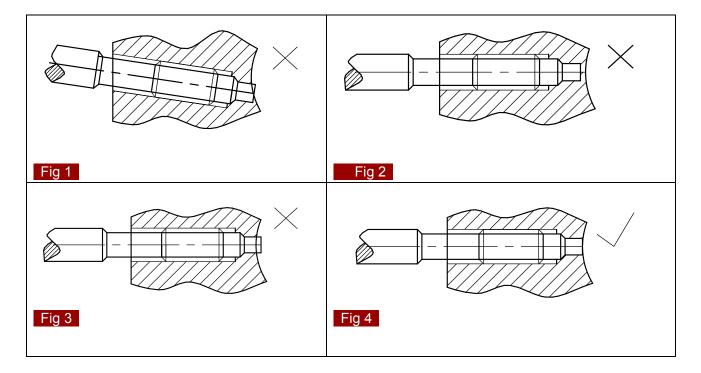

Melt pressure transmitter



Wiring diagram

Output	Function	Color	5PIN
	Signal +	Blue	1
	Excitation +	Red	2
0/5V, 0/10V;	Signal -	White	3
	Excitation -	Yellow	4
	Calibration	Black	5
Output	Function	Color	5PIN
	Signal+	Blue	1
4/00 4	Excitation+	Red	2
4/20mA	Calibration	Yellow	4
	Calibration	Black	5
Output	Function	Color	6PIN
	Signal +	Blue	А
	Signal -	Green	В
	Excitation +	Red	С
0-5V;0-10V;	Excitation -	Yellow	D
	Calibration	Brown	E
	Calibration	Black	F
Output	Function	Color	6PIN
	E+/ S+	Red	А
4-20mA	E-/ S-	Blue	В
4-20111A	Calibration	Yellow	E
	Calibration	Black	F

Shanghai Zhaohui Pressure Apparatus Co., Ltd

5-6F No.8 Building No.115 ,Lane 1276 Nanle Road Songjiang District Shanghai 201600 China Tel:+86-21-51691919 67755189 Fax:+86-21-67755185 Ex E-mail: info@zhyqsensor.com www.zhygsensor.com



Page 4 of 4

ZHYQ sensor & control