# **Melt Pressure Transducer**

# Model: PT124G-111 (Rigid Type)



#### Description

PT124G-111 Series Melt Pressure Transducer. This model adopts special construction and excellent alloy elastic membrane to reduce the thermal draft ,improve the accuracy, good anti-jamming performance andt built in 80% shunt calibration, it can match our N series pressure instrument also can match the pressure instrument or controller of other brand . It is suitable for pressure measuring and controlling in melt fluid medium, such as the plastic & polymer in the process equipments. Can replace Dynisco / Gefran /GP50 etc. international brand absolutely .

#### Application


- Chemical fiber Equipment
- Plastic and Rubber manufacturing equipment
- Chemical fiber, polyester process equipment
- Measure and Control all kinds of melt fluid

#### Feature

- High-standard quality
- Stainless steel Seal
- Simple Installation
- ♦ 80% inner calibration
- Excellent stability and repeatability

#### Dimension



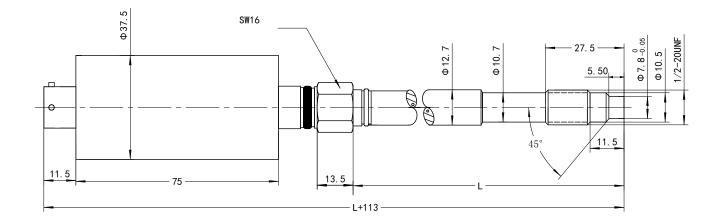



Specification	
Pressure range:	03.5 MPa to 0150MPa
Output:	2mV/V; 3.33mV/V
Input voltage:	10 (6~12V) DC
Accuracy:	±1.0%FS; ±1.5%FS (including linearity , Repeatability & Hysteresis )
Repeatability:	±0.2% FSO
Construction:	Wheatstone bridge
Bridge resistance:	Input: 345 Ohms Minimum; Output: 350 Ohms±10%
Overload pressure:	1.5×FSO
Internal shunt calibration:	80%±1%
Insulation Resistance:	200Megohms @100Vdc
Standard wetted Parts	Diaphragm coated 15-5PH SST
Mounting Torque	500inch/lbs , maximum
Max. Diaphragm Temp:	<b>0~400</b> ℃
Electronic operating temperature:	-25℃ -85℃
Electric connector:	5PIN; 6 PIN
Rigid Length	6",9" (Customer design)
Process connector:	1/2"-20UNF, M14×1.5, M18×1.5 (Customer design)

# Mounting hole

	D1	M22×1.5	M28×1.5	G3/4″	PT3/8″
	D2	Ф16.1	Φ18.3	Ф18.3	Ф10.3
	D3	Ф20.1	Ф26.1	Ф24.2	Ф14.9
	М	Ф23	Ф30	Φ21	Φ11
	А	11	12	12	14
C B	В	12	15	15	19
Planar Sealed		40	35	35	40
-@0.02 (\$) 45° -	D1	M12×1.5	M14×1.5	1/2-20UNF	M18×1.5
	D2	Ф8	Ф8	Ф8	Ф10.1
	D3	Ф10.8	Φ12.5	Φ11.5	Ф16.1
	D4	Φ12.5	Φ14.5	Φ13.1	Ф20
A.	А	6	6	6	6.5
45° Slope Sealed	В	9	9.5	9.5	10

Ordering Guid	е						
Model	Range	Output	Rigid length	Screw	Electric	Acourcov	Othora
woder	(bar)	Output	(inch)	Thread	connection	Accuracy	Others
PT124G-111							
Example: PT124G-111-500Bar-2mV/V -6"-1/2-20UNF-6PIN-1.0%FS							

# ZHYQ

## Attention for installation

### 1, Installation

Do not remove protective cap until ready to install. Prior to initial installation, verify correct machining of mounting hole. Install with aluminum gasket. The electronics housing should be secured, with the enclosed mounting bracket.

## 2, Remove

Make sure that there is no remained metal or plastic; remove all of the transducers from the equipment before you clean the extruder. You can remove the transducer only when the polymer is molten. And clean the diaphragm of the transducer with soft cloth as soon as you remove it. At the same time, you can use ZHYQ's cleaning tool kit to clean the remained material in the mounting hole in order to install easily next time.

### 3, Start-up

Bring system to operating temperature, and with no pressure, follow recommended procedures with instrumentation for zero and span adjustment. Make sure that there is sufficient "soak time" to assure that any material at the tip of the transducer is molten before process is started.

### 4, Electrical house

The tip of the transducer can endure high temperature, but the shell (electrical house) only endure temperature lower than 80  $^{\circ}$ C, so it should place in the room temperature. It can benefit for the accuracy and natural life of the transducer if you keep the shell from the high temperature.


### 5, Overload effect

During the course of pressure measuring and controlling, it is better to make sure the transducer within the rated pressure, too long time overload the pressure will affect the accuracy and natural life of transducer, although the transducer own determinate overload ability.

#### 6, Wiring

Use shielded cable, attach cable shield to ground at one end only. In order to prevent the jamming.

#### Select correct installation

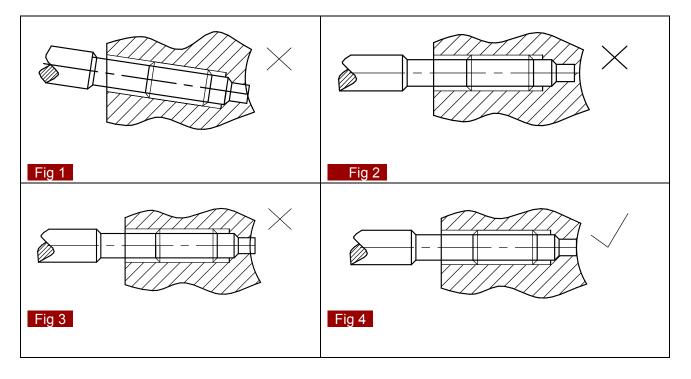

# Melt pressure transducer



Output	Function	Color	5PIN	
2mV/V; 3.33mV/V;	Signal +	Blue	1	
	Excitation +	Red	2	$\left(\begin{array}{c} \left( \begin{array}{c} O & O \\ 2 & 1 \\ O & O \\ 4 & O \end{array} \right) \right)$
	Signal -	White	3	
	Excitation -	Yellow	4	
	Calibration	Black	5	
Output	Function	Color	6PIN	
2mV/V; 3.33mV/V;	Signal +	Blue	A	
	Signal -	Green	В	
	Excitation +	Red	С	
	Excitation -	Yellow	D	
	Calibration	Brown	E	
	Calibration	Black	F	

# Wiring diagram

# Shanghai Zhaohui Pressure Apparatus Co., Ltd

5-6F No.8 Building No.115 ,Lane 1276 Nanle Road Songjiang District Shanghai 201600 China Tel:+86-21-51691919 67755189 Fax:+86-21-67755185 E-mail: info@zhyqsensor.com Ex www.zhygsensor.com

ZHYQ sensor & control



Page 4 of 4